

How to install the chopper blade and drive shaft

- Carefully Install the chopper blade over the drive shaft.
- Ensure that the UP marking (find the UP marking is on the plastic of blade) is facing upward when fitting the blade onto the drive shaft.
- Find the 4 crossed notches
- Push the drive shaft ribs through 2 of the the plastic notches
- Rotate the drive shaft clockwise to lock the shaft and blade assembly firmly.
- Once aligned the chopper blade will lower down to the base of the drive shaft, the 2 ribs should completely above the 4 rivets on the chopper blade, place the chopper blade into the bowl it is almost touching the bottom of the food processor bowl.

If above steps are not so clear for you, please check our demo video on Amazon page or contact us and we can send you the related demo video.



The chopper blade assembly is installed incorrectly
The shaft with a long distance visible from the bottom part
You can not chop food and it may damage the bowl !

The chopper blade assembly is installed correctly
The shaft ribs are fully through the chopper blade
The shaft ribs are above 4 rivets

