



Quick Start Guide Version 1.0

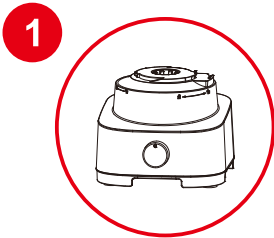

1

Unpack


Unpack the box and take out the contents.
Place the motor base on a flat surface.

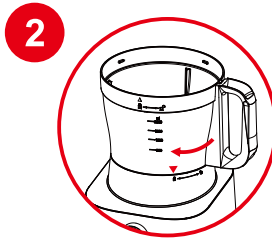

2

Lock The Bowl


Place the bowl onto the motor base with the handle facing slightly away from you.
Twirl the bowl clockwise until it clicks into the "lock" position.

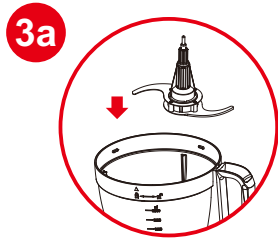

3a

Mount The Blade


When using the chopper blade or kneading blade, mount the assembled driving shaft and blade into the bowl.

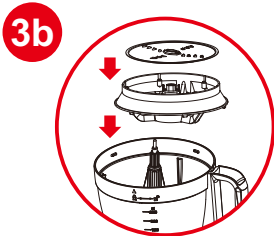

3b

Mount The Blade Disc & Holder


When using the blade disc, place the driving shaft into the bowl first. Then put the assembled disc holder and blade disc together into the bowl.

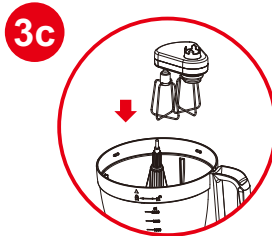

3c

Mount The Double Beaters


When using the double beaters, place the driving shaft first. Then place the double beaters onto the driving shaft.

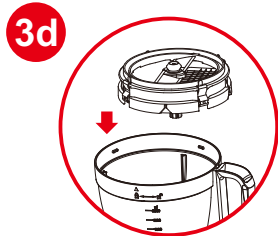

3d

Mount The Dicer Attachment


When using the dicer attachment, you don't need to place the driving shaft.
Just place the assembled dicer attachment into the bowl.

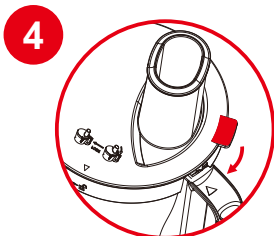

4

Place The Lid


Place the lid on the top of the bowl. Find out the triangle indicator on the lid and line it up with the "unlock" symbol on the top of the bowl.

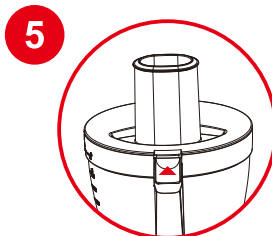

5

Lock The Lid

Twirl the lid clockwise until it clicks into the "lock" position. The handle should be facing the right side of the control panel.

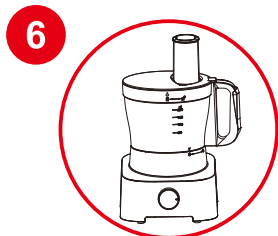


6

Start Processing


Plug the appliance into a power point and turn it ON. Turn the control dial as desired. Feed ingredients through the feeding chute.




Installation Tips:

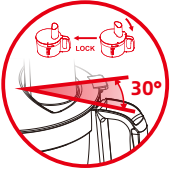


For better installation, please place the lid on the bowl with 30 degree angle between protruding part of the lid and the handle. Please follow the directions of "lock and unlock" symbols on the lid and bowl to lock and unlock the lid.

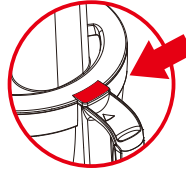

The lid should be firmly locked as the left picture shows to make sure the safety lock is activated.

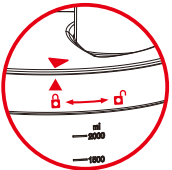

Please notice that the directions of the "lock and unlock" symbols on the lid and bowl indicate the directions of locking and unlocking the lid.

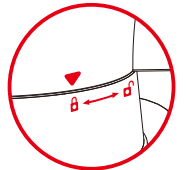

Please lock and unlock the bowl according to the "lock and unlock" symbols on the base.



The bowl should be firmly locked to activate the safety lock. For a new machine, it may be a little difficult to lock the bowl on the motor base and you may need to use some strength. Make sure that the handle is facing to the right at a 90 degree angle.



NEVER try to install the bowl with handle on the left, it can not be installed! Please install the bowl with handle on the right.

Cleaning :

To clean, wash all accessories with warm soapy water. Wipe the base with a moist cloth. The base is Aluminum die-cast material. Please avoid scratches by hard objects.