



TEL:+1 (833) 306 1883
EST:09:00-17:00 (Monday-Friday)

MUST READ

HOW TO POWER ON YOUR FOOD PROCESSOR

Still Can't Start or Any Other Issue?
Contact us: Email support@magiccos.co

TURN OVER 




Won't Power On?



The food processor is designed with **Double Safety -Lock System**. It **ONLY START TO WORK** when both locks are correctly activated!

YouTube start guide video link: <https://youtu.be/lzZvnkhh0gs>

① First Safety Lock between the bowl & the base

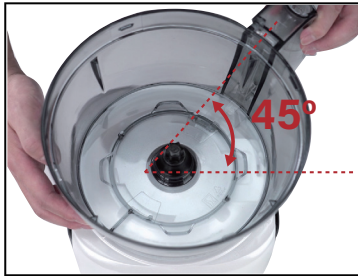

Step 1

- Keep the front base facing yourself and the handle of the bowl facing the Right.
- Look down at the base to find "the upper right 45 degree". Make sure the handle of the bowl is on that position.



Step 2

- Then use some strength to turn clockwise to install the bowl on the base from original position to the very **RIGHT** position.
- You **MUST HEAR** a **CLICK SOUND**, indicating that it is locked.
- Make sure to line up the indicator with the 'lock' symbol.

② Second Safety Lock between the bowl & the lid



Step 3

- Install the Lid On the Bowl
- Similarly, find "the upper right 30 degree" to put the lid on the base. Turn clockwise to the **RIGHT** position.



Step 4

- Use some strength to create a **CLICK SOUND**, meaning the lid is correctly assembled on the bowl.
- Make sure to line up the indicator with the 'lock' symbol.

③ How To Use Digital Touch Panel



Step 5

- The '**ON/OFF**' button must be pressed **2S** to light up



Step 6

- Touch to select the mode or rotate switch to choose related speed



Step 7

- Press '**Start/Pause**' button to start the program

【Now You Can Start!】 Still can't? Contact us:  support@magiccos.co



TEL:+1 (833) 306 1883
EST:09:00-17:00 (Monday-Friday)

MUST READ

HOW TO INSTALL THE ACCESSORIES



If you meet some problems, please
contact us immediately at our email
support@magiccos.co

TURN OVER 

Chopper Blade



- When using chopping blade or kneading blade, mount the assembled driving shaft and blade.
- You may need to slightly rotate the blade to allow it to align with the grooves found on the driving shaft.



Chopper Blade

- Once they attached firmly please put them together into the middle of the bowl.



Chopper Disc



- When using a blade disc, insert the driving shaft.



Chopper Disc

- Then put assembled disc holder and disc blade together into the bowl.

